ONIDA Wash™

DESIGNED WITH YOU IN MIND

USER'S MANUAL

Fully Automatic
WASHING MACHINE

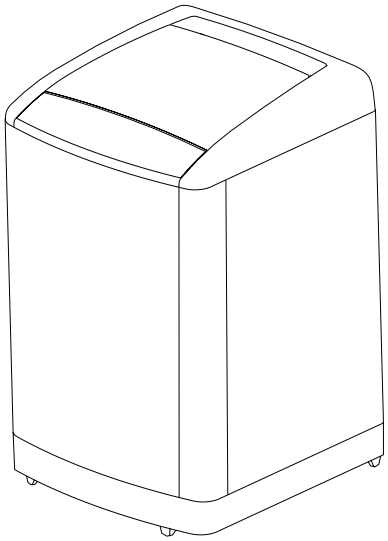

SPARKLE 65S/65H/65B

Before operating the Washing Machine, Please read this Guide thoroughly, and retain for future reference.

Dear Customer ,

Congratulations! You are now a proud owner of Onida SPARKLE 65S/65H/65B Fully automatic Washing Machine. We would particularly advise you to study the User's manual carefully to get the best out of your Onida Machine and please take the precautions mentioned on the following pages.

Once again, Welcome to the happy ONIDA family.

Contents :

SAFETY PRECAUTION	1
FEATURES	2-3
FAMILIARISATION WITH CONTROL PANEL	4
PARTS LOCATION AND IDENTIFICATION	5
INSTALLATION & PREPARATION	6
CONNECTING THE DRAIN HOSE	7
PREPARATION BEFORE WASH	8
WASHING PROCEDURE	9-10
SELECTABLE WASHING METHODS	11
MAINTENANCE	12
TROUBLE SHOOTING	13
GUIDELINES FOR SAFETY AND DURABILITY	14
SPECIFICATIONS	15
ONIDA SERVICE CENTRES	16
WARRANTY CARD	

Safety Precautions

Please note that the following precautions for safety intend to prevent unpredictable danger and damage by helping the Proper use in safety.

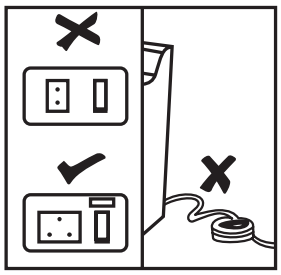

- Make sure that the washing machine is plugged to a 5A electrical outlet and earth terminal is provided on the outlet.
- Unplug the power supply cord when you do not use it.
- To disconnect the washing machine from electrical mains completely, pull out the plug and never pull it from the mains cord.
- Don't allow your kids to look into the inside of the washing machine.
- This washing machine is meant for washing clothes with water as a medium. Do not use petrol or other chemicals. This can result in fire and damage.
- Do not use water with temperature exceeding 50^{0}C, as this deforms the plastic parts in the machine. If you desire to use warm water add hot water to cold water in the wash tub. Do not pour hot water in an empty tub.
- Keep the machine away from flames and inflammable material. Do not expose the washing machine to direct sunlight or rain. Also avoid placing it in humid locations.
- Take caution not to pierce the control panel membrane sheet.
- Never connect the earth wire to a phone wire, lightning rod.
- Do not press the button with an awl or pin.
- Never wash the washing machine or spread the water on machine top. Clean with just wet cloth or cloth soaked in soap water.

Features

- ***Brush***

  With an actual Brush fitted on the inside of your drum, your clothes are treated gently with a cleaning system which is very much like a real person giving it a “hand wash”.

- ***Water Saver Program***

  In this Program the rinse function combines the spin and water spray features to help save energy and reduce water consumption by approximately 35%.

- ***Hexo Drum***

  The Hexo Drum design creates a protective barrier of water between the drum and clothes. This ensures that your clothes get the best wash with minimum damage.

- ***SS Holeless Drum***

  A special tub made with the latest technology in mind, the Stainless Steel Holeless Drum ensures that even with minimal water consumption you can get highly effective washes. It does so by raising the water level momentarily inside the inner tub allowing the water to soak the entire wash load.

- ***Waterfall***

  Just like a Waterfall dropping from great heights, this feature creates turbulence inside the wash tub which results in better dissolution of detergents within the water helping it to spread evenly throughout the clothes. It also produces greater movement of the wash load to give you enhanced cleaning action

- ***Fuzzy Logic Control***

  Advanced technology features means that now your machine can do the thinking for you. With the Fuzzy Logic Control, the machine will indicate the required detergent level and will automatically decide the water level and wash time needed based on the load of the wash you put in and the temperature of the water you choose.

- ***Magic Filter***

  The strategically placed box-type Magic Filter makes excess lint on your clothes history. It is positioned on the lower level of the tub which means that even in small wash loads the fluff will be captured in the Magic Filter and your clothes will remain lint-free.

Features

- ***Active Soak***

  The Active Soak function is there for those stubborn stains that cannot be removed with regular washing. It allows the clothes to be immersed in the detergent infused water and sends quivers through the wash from time to time so that it can attack the deepest dirt on your clothes and remove it.

- ***Eject Mechanism***

  The Eject Mechanism allows you to open or close the door just at the press of a button. So now you can say goodbye to handles!

- ***Tempered Curved Glass Lid***

  The Sparkle range comes with a Curved Transparent Window for a clear view of your clothes while they are being cared for. The Tempered Glass used is also stronger and adds to the durability of your washing machine.

- ***Memory Back-up***

  The Memory Backup ability in your machine means that if you are going out or want to stop the cycle in the middle of a wash, you will be able to restart it from that particular point whenever you want.

- ***Water Level Selection***

  With consumers desiring more water and energy saving washing machines, we have a Water Level Selection feature which allows you to choose from a variety of water levels depending on the wash load. This means there will be no more wastage!

- ***Delay Start***

  The Delay Start option will allow you to set the machine to start at a later time or date so that your washing will be scheduled around your day and not your day around your washing!

- ***Child Lock***

  This is an important feature if you have children in the house. The Child Lock option will disengage all the buttons on the machine so that your child is safe from harm and the wash cycle cannot be tampered with.

Familiarisation with Control Panel

Display Unit

● The unit will indicate the Remaining time to complete the selected program. Also indicates the error signals whenever they occur.

Programs Selector

● As you press this button washing program changes as follows.

Fuzzy + Rinse Hold → Heavy → Heavy + Rinse Hold → Gentle/Wool → Gentle/Wool + Rinse Hold → Quick Wash Quick Wash + Rinse Hold → Water Saver → Water Saver + Rinse Hold → Jeans → Jeans + Rinse Hold → Sari → Sari + Rinse Hold → Turbo Clean → Turbo Clean + Rinse Hold → Tub Clean

Start/Pause/Delay Selector

● This button is used to start, pause the operation and to set the delay time. To change the washing course during operation, press this button to pause and press the button to restart the operation after changing the course. To set the delay time press this button with delay function selected. The delay time will change from 1 hr to 99 hrs with each press of the button with increment of 1 hr.

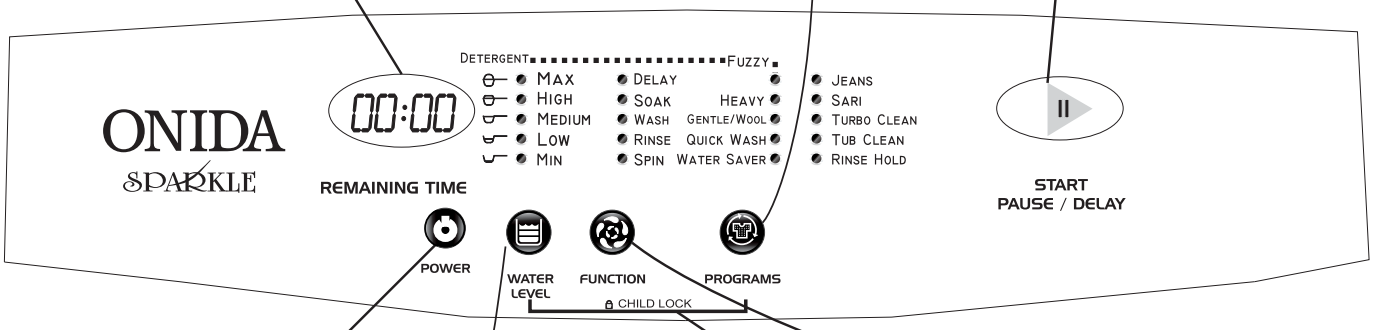

Power Button

● Power button is used to switch ON and switch OFF the machine.

Water Level Selector

● In Fuzzy program according to the cloth load the Detergent level will be shown on the panel and Water level will automatically get selected internally and in other programs select the water level manually.

Max → High → Medium → Low → Min

Child Lock

● If any program is running or after starting any program the Water Level Button & Program Selection Button are simultaneously pressed for 2 seconds, machine will go into Child lock mode. This feature inactivates the control panel keypad. Press the same buttons for 5 Seconds to de-activate the Child lock.

Function Selector

● With each press of this button combination of Soak, Wash, Rinse and Spin functions can be done for selecting the washing course. This button can also be used to select the Delay function.

Note : This machine is equipped with memory backup function. This helps to retain same program in case of power failure.

Parts Location And Identification

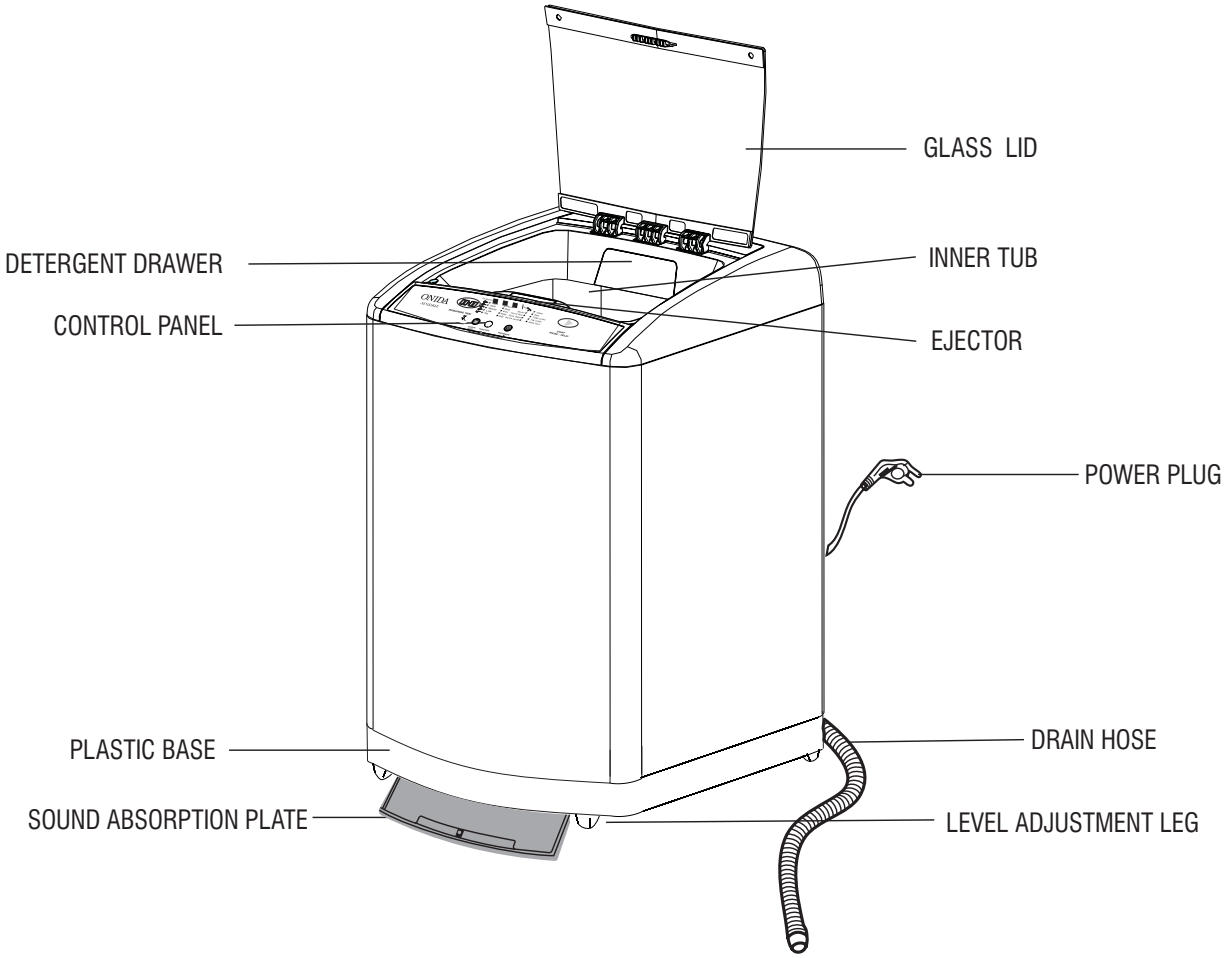

MAGIC LINT FILTER

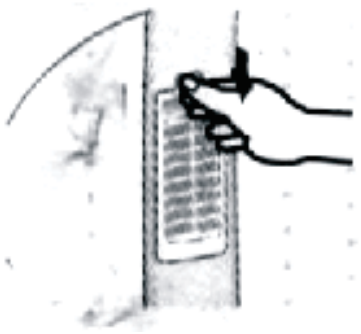

BRUSH

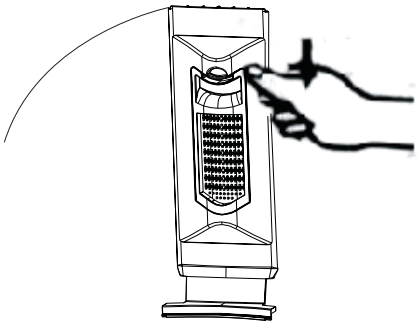

Installation & Preparation

- Install the washing machine on a leveled and firm space.

- Adjust washing machine level by loosening or tightening the leg adjuster provided on the right hand side of the bottom of the washing machine.

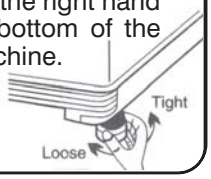

- See if the level on the washing machine is correct.

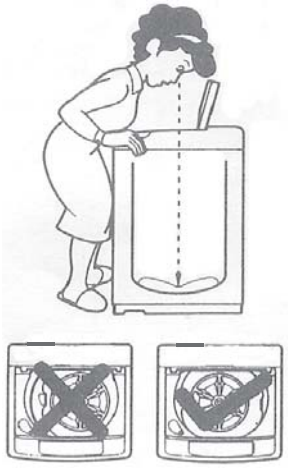

- Keep the machine more than 20 cm away from the walls to prevent noise.

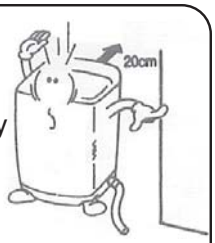

- Insert sound absorption plate into the slot at the Bottom of the machine.

Connect the Inlet Hose

Horizontal tap

Extension tap

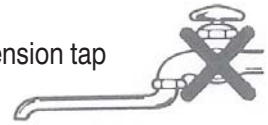

Square tap

Untighten the upper connector screw and the middle connector.

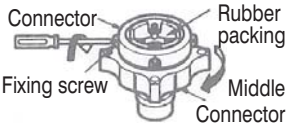

- In case the diameter of the tap is large remove the guide plate

Push the upper connector up till the rubber packing is in tight contact with the Tap. Then tighten the 4 screws.

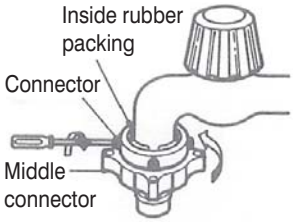

- Turn the middle connector to ensure no water leakage.

Connect the water supply hose to the middle connector, pushing the plate up.

- To separate the water supply hose from middle connector shut off the tap. Then pull the inlet hose down, pushing the plate down.

- Check to see if there is a rubber seal inside the connector.
- Check the water hose to the inlet valve of the washing machine, and then lock it by turning the hose connecting part.

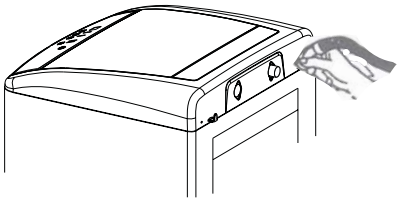

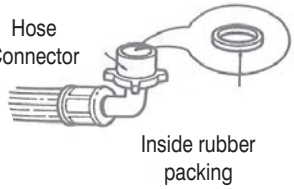

Connecting the Drain Hose

- Connect the drain hose to the outlet of the washing machine.

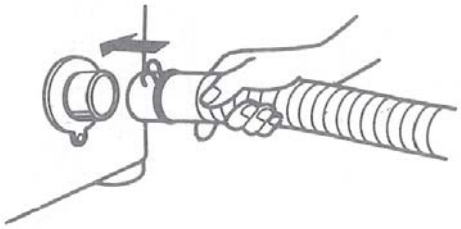

- Fix the drain hose with the clip, and then push the clip toward the body of the washing machine as shown below.

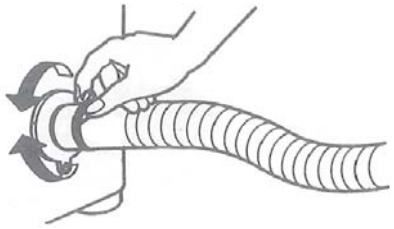

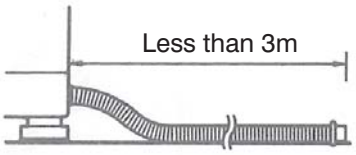

- Additional hose is connected.

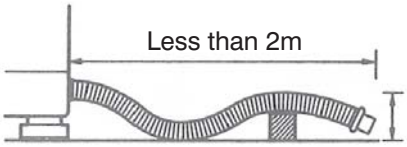

- Place the drain hose over a threshold.

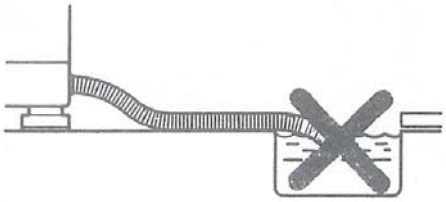

- Never let the end of the drain hose be immersed in water.

Preparation before Wash

- Check if laundry is washable in water.

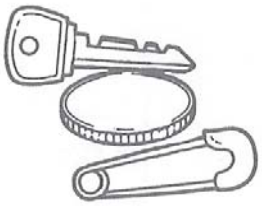

- Be sure to remove things such as keys, pins and coins from the laundry.

- Wash oily or dyed laundry separately.

- Shake loose dirt off before washing.

- Wash laundry with loose lint by turning it inside out.

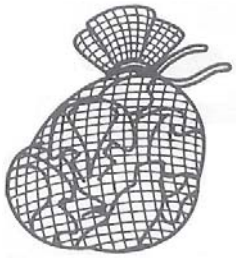

- Wash delicate clothes, wrapping them in a nylon net.

READY?

- Plug the power cord into the electrical outlet.
- Lay the drain hose on the drain hole.
- Connect the inlet hose with the tap.

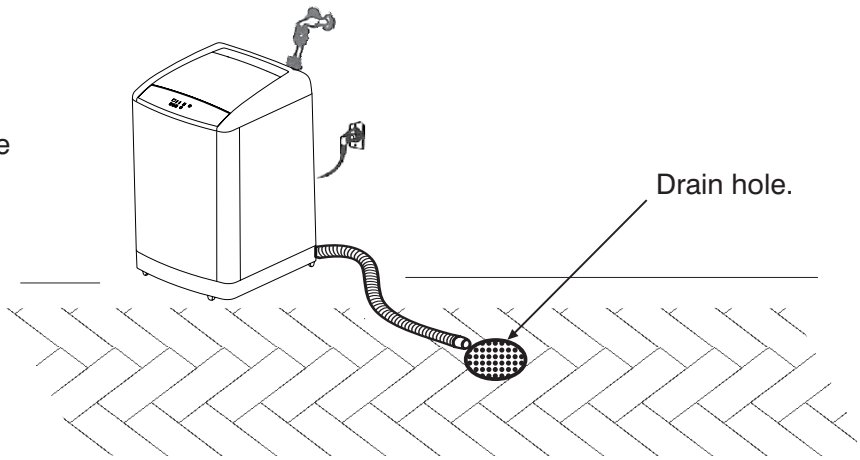

Washing Procedure

1 Connect the inlet hose to the tap. Plug in the power cord. Lower the drain hose.

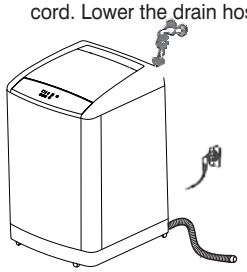

2 Press EJECT to release the glass lid from the catch and open it. Reverse the operation to close the lid.

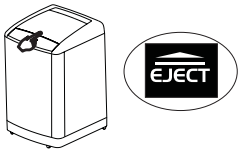

Note : If you pressed EJECT one time and Lid is not lifted sufficiently from the catch do not press it again instead lift it up.

3 Put laundry in the tub.

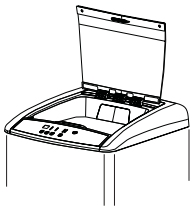

4 Put proper amount of softener into the Softener inlet if required. The Softener will be automatically adds into the tub at the last rinsing cycle.

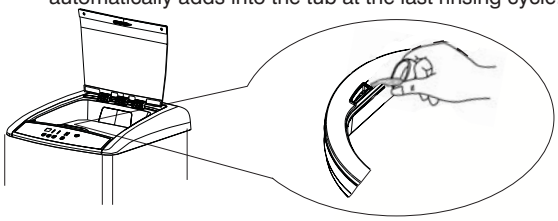

Note :

1. Do not add detergent or bleach into the softener inlet.
2. Using too much softener may lead unsatisfactory result.

5 Press the power switch.

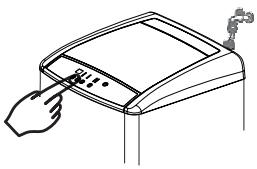

6 Select the Programme as you desired and press the START/PAUSE button. From this moment enjoy your time.

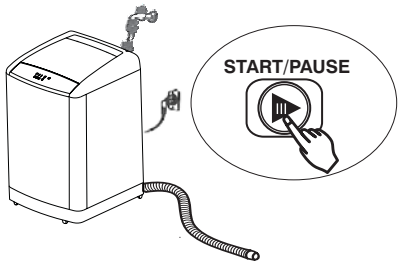

Washing Procedure

FUZZY PROGRAM

Controller automatically displays the Detergent Level & selects Water Level.

- Press the power button to "ON"
- Press the START/PAUSE/DELAY button.
  (If you want *Rinse Hold option,* press the *PROGRAMS Button* once).
  Water level is selected & Detergent level is displayed automatically.
  Put the detergent in the "Detergent Drawer" as per Display on the Control Panel.
  Soak, Wash, Rinse & Spin follow.
  If you want to pause, press the START/PAUSE/DELAY button again. You can change the program when paused.
- Close the lid.



HEAVY PROGRAM

Use this program for washing heavy laundry.

- Press the *POWER* to "ON".
- Press the *PROGRAMS* button Twice.
  ***(If you want Rinse Hold* option, press the *PROGRAMS* Button Thrice).**
  Select the water level depending on the cloth load (default "Max" level).
  Put the detergent in the "Detergent Drawer".
- Press the *START/PAUSE/DELAY* button.
  Soak, Wash, Rinse & Spin follow.
  If you want to pause, press the START/PAUSE/DELAY button again. You can change the program when paused.
- Close the lid.

GENTLE / WOOL PROGRAM

Use this program for washing Woolen or Delicate laundry.

- Press the *POWER* button to "ON".
- Press the *PROGRAMS* button Four Times.
  ***(If you want Rinse Hold* option, press the *PROGRAMS* Button Five Times).**
  Fixed water level of "Max" is selected automatically.
  Put the detergent in the "Detergent Drawer".
- Press the *START/PAUSE/DELAY* button.
  Machine runs for 1 minute to dissolve the detergent and stops.
  Buzzer will beep and display will show "CL".
  LOAD THE LAUNDRY INTO THE MACHINE
  Press the *START/PAUSE/DELAY* button.
  Wash, Rinse & Spin follow.
  If you want to pause, press the START/PAUSE/DELAY button again. You can change the program when paused.
- Close the lid.

QUICK WASH PROGRAM

Use this program for washing little dirty laundry within short time.

- Press the *POWER* button to "ON".
- Press the *PROGRAMS* button Six Times.
  ***(If you want Rinse Hold* option, press the *PROGRAMS* Button Seven Times).**
  Select the water level depending on the cloth load (default "Max" Level)
  Put the detergent in the "Detergent Drawer".
- Press the *START/PAUSE/DELAY* button.
  Wash, Rinse & Spin follow.
  If you want to pause, press the START/PAUSE/DELAY button again. You can change the program when paused.
- Close the lid.

WATER SAVER PROGRAM

Use this program to wash medium soiled clothes and to **save water and detergent using shower rinse technology.**.

- Press the *POWER* button to "ON".
- Press the *PROGRAMS* button Eight Times.
  ***(If you want Rinse Hold* option, press the *PROGRAMS* Button Nine Times).**
  Select the water level depending on the cloth load (default "Max" Level)
  Put the detergent in the "Detergent Drawer".
- Press the *START/PAUSE/DELAY* button.
  Soak, Wash, Rinse & Spin follow.
  If you want to pause, press the START/PAUSE/DELAY button again. You can change the program when paused.
- Close the lid.

Note: Please do not use excess detergent.

JEANS PROGRAM

Use this program for washing heavily soiled heavy laundry.

- Press the *POWER* button to "ON".
- Press the *PROGRAMS* button Ten Times.
  ***(If you want Rinse Hold* option, press the *PROGRAMS* Button Eleven Times).**
  Select the water level depending on the cloth load (default "Max" Level)
  Put the detergent in the "Detergent Drawer".
- Press the *START/PAUSE/DELAY* button.
  Soak, *Wash, Rinse & Spin follow.*
  If you want to pause, press the START/PAUSE/DELAY button again. You can change the program when paused.
- Close the lid.

SARI PROGRAM

Use this program for washing Sari and similar kind of laundry.

- Press the *POWER* button to "ON".
- Press the *PROGRAMS* button Twelve Times.
  ***(If you want Rinse Hold* option, press the *PROGRAMS* Button Thirteen Times).**
  Select the water level depending on the cloth load (default "Max" Level)
  Put the detergent in the "Detergent Drawer".
- Press the *START/PAUSE/DELAY* button.
  Wash, Rinse & Spin follow.
  If you want to pause, press the START/PAUSE/DELAY button again. You can change the program when paused.
- Close the lid.

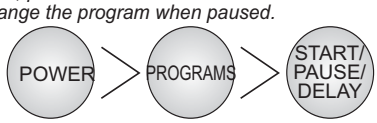

TURBO CLEAN PROGRAM

Use this program for washing Baby laundry & under garments.

- Press the *POWER* button to "ON".
- Press the *PROGRAMS* button Fourteen Times.
  ***(If you want Rinse Hold* option, press the *PROGRAMS* Button Fifteen Times).**
  Select the water level depending on the cloth load (default "Max" Level)
  Put the detergent in the "Detergent Drawer".
- Press the *START/PAUSE/DELAY* button.
  Soak, *Wash, Rinse & Spin follow.*
  If you want to pause, press the START/PAUSE/DELAY button again. You can change the program when paused.
- Close the lid.

TUB CLEAN PROGRAM

Use this program for cleaning the machine.

- Press the *POWER* button to "ON".
- Press the *PROGRAMS* button *Sixteen* Times.
  Water level will be "Min" Level by default.
- Press the *START/PAUSE/DELAY* button.
  Wash & Spin follow.
  If you want to pause, press the START/PAUSE/DELAY button again. You can change the program when paused.
- Close the lid.

Selectable Washing Methods



WASH ONLY

- Press the *POWER* button to "ON".
- Select your desired washing program by pressing *PROGRAMS* button.
- Press the *FUNCTION* button "Once" (If Gentle/Wool, Quickwash and Sari Program are selected in previous step) OR
  Press the *FUNCTION* button "Twice" (If Heavy, Water Saver, Jeans and Turbo Clean Program are selected in previous step) OR
  Press the *FUNCTION* button "Twice" (If Fuzzy Program is selected in previous step).
- Press the *START/PAUSE/DELAY* button once.
- Washing goes on as per *PROGRAMS* selection.
- Close the lid.



SPIN ONLY

- Press the *POWER* button to "ON".
- Select your desired washing program by pressing *PROGRAMS* button.
- Press the *FUNCTION* button "Four Times" (If Gentle/Wool, Quickwash and Sari Program are selected in previous step) OR
  Press the *FUNCTION* button "Five Times" (If Heavy, Jeans and Turbo Clean Program are selected in previous step) OR
  Press the *FUNCTION* button "Five Times" (If Fuzzy Program is selected in previous step).
- Press the *START/PAUSE/DELAY* button once.
- Spin goes on as per *PROGRAMS* selection.
- Close the lid.



WASH AND RINSE

- Press the *POWER* button to "ON".
- Select your desired washing program by pressing *PROGRAMS* button.
- Press the *FUNCTION* button "Twice" (If Gentle/Wool, Quickwash and Sari Program are selected in previous step) OR
  Press the *FUNCTION* button "Thrice" (If Heavy, Water Saver, Jeans and Turbo Clean Program are selected in previous step) OR
  Press the *FUNCTION* button "Thrice"" (If Fuzzy Program is selected in previous step).
- Press the *START/PAUSE/DELAY* button once.
- Washing goes on as per *PROGRAMS* selection.
- Close the lid.



RINSE AND SPIN

- Press the *POWER* button to "ON".
- Select your desired washing program by pressing *PROGRAMS* button.
- Press the *FUNCTION* button "Thrice" (If Gentle/Wool, Quickwash and Sari Program are selected in previous step) OR
  Press the *FUNCTION* button "Four Times" (If Heavy, Water Saver, Jeans and Turbo Clean Program are selected in previous step) OR
  Press the *FUNCTION* button "Four Times" (If Fuzzy Program is selected in previous step).
- Press the *START/PAUSE/DELAY* button once.
- Washing goes on as per *PROGRAMS* selection.
- Close the lid.



WASH AND SPIN

- Press the *POWER* button to "ON".
- Select your desired washing program by pressing *PROGRAMS* button.
- Press the *FUNCTION* button "Five Times" (If Gentle/Wool, Quickwash and Sari Program are selected in previous step) OR
  Press the *FUNCTION* button "Six Times" (If Heavy, Water Saver, Jeans and Turbo Clean Program are selected in previous step) OR
  Press the *FUNCTION* button "Six Times" (If Fuzzy Program is selected in previous step).
- Press the *START/PAUSE/DELAY* button once.
- Washing goes on as per *PROGRAMS* selection.



WASH, RINSE AND SPIN

- Press the *POWER* button to "ON".
- Select your desired washing program by pressing *PROGRAMS* button.
- If Gentle/Wool, Quickwash and Sari Program are selected in previous step then directly go to next step.
  If Heavy, Water Saver, Jeans and Turbo Clean Program are selected in previous step then press the *FUNCTION* button "Once" and go to next step.
  If Fuzzy Program is selected in previous step then press the *FUNCTION* button "Once" and go to next step.
- Press the *START/PAUSE/DELAY* button once.
- Washing goes on as per *PROGRAMS* selection.



DELAY, WASH, RINSE AND SPIN

- Press the *POWER* button to "ON".
- Select your desired washing program (Gentle/Wool, Quickwash and Sari) by pressing *PROGRAMS* button.
- Press the *FUNCTION* button "Six" times.
- Press the *START/PAUSE/DELAY* button to select the desired delay time.
- After few seconds the machine will go to delay mode.
- The selected functions/program will start after selected delay time.



DELAY, SOAK, WASH, RINSE AND SPIN

- Press the *POWER* button to "ON".
- Select your desired washing program (Heavy, Water Saver, Jeans and Turbo Clean Program) by pressing *PROGRAMS* button.
- Press the *FUNCTION* button "Seven" times (If Heavy, Jeans and turbo Program are selected in previous step) OR
  Press the *FUNCTION* button "Five" times if Water Saver Program is selected OR
  Press the *FUNCTION* button "Seven" times if Fuzzy Program is selected.
- Press the *START/PAUSE/DELAY* button to select the desired delay time.
- After few seconds the machine will go to delay mode.
  The selected functions/program will start after selected delay time.

Note : 1. After Completion of cycle, buzzer beeps and power to the machine goes off automatically.
2. After completion of cycle, machine will beep after intervals of 5 minutes till the main supply to the machine is discontinued.

Maintenance

❑ Clean the filter in the inlet valve. Clean the filter when water supply into the tub is bad or the inlet valve is clogged with impurity.

1 Plug out the power cord from the outlet first.

2 Pull out the filter from the inlet valve with fingers.

3 Use a tooth brush to get rid of filth and then insert the filter back in position.

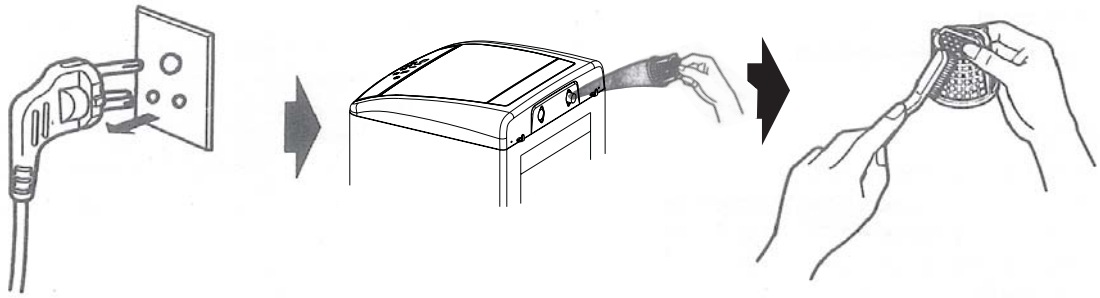

❑ Clean the waste thread collected in the Magic Lint filter.

1 Push the upper part of the filter and pull in.

2 Open the cover as shown in the figure.

3 Clean the filter.

4 Close the cover and insert the lower part of the filter in the basket first and then push the filter with “click” sound.

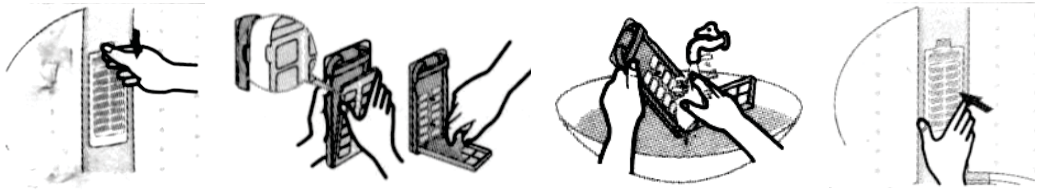

❑ Clean the brush to get rid off residues and lints accumulated over the bristles.

1 Push the upper part of the Brush and pull in.

2 Clean the Brush.

3 Insert lower part of the Brush in the basket first and then push the brush with “click” sound.

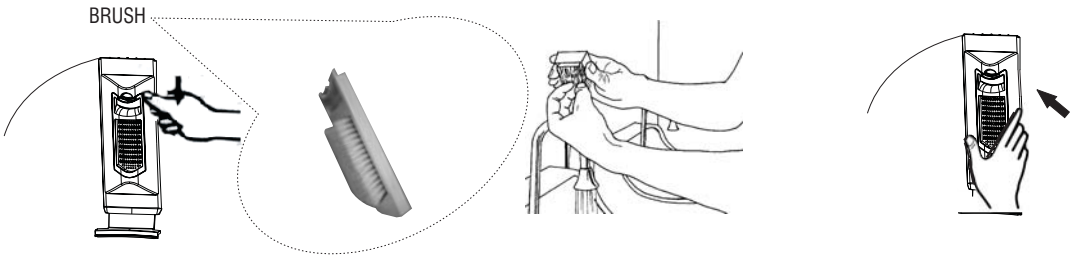

Note :

1. Bristle distortion might be there in the brush after completion of wash cycle. This will be resumed before next wash.
2. If bristles are coming out of brush call Onida service person & replace with the new brush.

Trouble-Shooting

PROBLEMS	CHECK-POINTS
No water supply. **E1** If the water is not supplied within 30 minutes, a buzzer will sound and remaining time indicator will show E1.	Check if the tap is a open. Check for water supply.
No drain. **E2** If the water does not drain within 5 minutes, a buzzer will sound and remaining time indicator will show E2.	Is the drain hose kept down? Is the drain hose twisted? or is not the threshold too high?
No spining. **E3** If the lid is opened during spin the buzzer will sound and the remaining time indication will show E3. **E4** If the tub is unbalanced the buzzer will sound and the remaining time indication will show E4.	Is the lid closed properly. Is the laundry unevenly balanced?
E5 If there is any Pressure switch/Pressure switch hose connection problem the buzzer will sound and the remaining time indication will show E5.	Contact nearest service centre for rectification.

PROBLEMS	CHECK-POINTS
No power supply	Is the power switch pressed?  Is the power cord unplugged? Power failure? Fuse blown?
Machine not working.	Is the water tap shut off? Is the water level normal? START/PAUSE Has the START/PAUSE button been pressed?
The high level of vibration and noise during spinning.	Is the washing machine installed on a level place? Is the noiseproof plate properly fit into the plastic base?

Guidelines for Safety and Durability

❑ Observe the following guidelines for the durability of the washing machine and safety problems.

- Do not expose the washing machine to direct sun light or rain.

- Do not install the washing machine around a damp place.

- Do not sprinkle water over control panel switches.

- Do not plug many cords in one outlet at the same time.

- When plugging out the power cord, do not hold the wire.

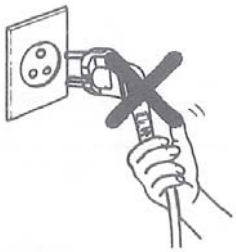

- Have children stay away from the washing machine.

- Keep the washing machine away from fire or heat source.

- Do not pour caustic soda and bleach over the washing machine. It causes damage to rubber parts.

- Do not pour water with temperature exceeding 70°C into the tub.

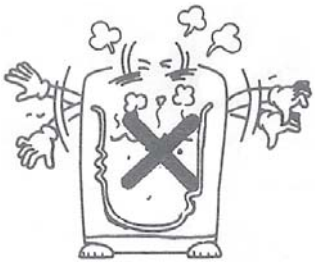

- Make sure of closing the lid, particularly during spinning.

- Do not put hands into the rotating tub.

- Let water drain away from the drain hose thoroughly.

Note : When not in use, switch the power off from wall socket or remove the power cord. Machine will give beeps till power supply is on. This is for safety.

Specifications

DESCRIPTION	SPARKLE 65S	SPARKLE 65H	SPARKLE 65B
CAPACITY (Kg)	6.5		
TYPE	Fully Automatic Machine		
POWER SOURCE	230 V AC, 50 Hz		
WATER PRESSURE RANGE (Kg/cm^2)	0.3 to 8.0		
WASHING SYSTEM	Hexafin Pulsator	Pulgitator	
BRUSH	No	Yes	
INNER TUB	Stainless Steel Hexo Drum	Stainless Steel - Holeless Drum	Stainless Steel Hexo Drum
REVOLUTION SPEED	Wash - 130 rpm Spin - 740 rpm		
MOTOR RATING	400 W (Input)		
DRIER SYSTEM	Spin Dry (Centrifugal Force)		
WATER LEVEL	5 (Five)		
DIMENSION (WxHxD) (mm)	580x910x595		
NET WEIGHT (Kg)	34.0 Kg		
ACCESSORIES	Inlet Hose - 1 No. Drain Hose - 1No. Sound Absorption plate - 1 No.		

(Design & Specification subject to change without notice)

List of Service Centre nos. In India

State	Service Number
Andhra Pradesh	040-39889000
Delhi	011-39889000
GOA	022-39889000
Gujarat	079-39889000
Haryana	0172-3988900
Karnataka	080-39889000
Kerala	0484-3988900
Madhya Pradesh	0731-3988900
Maharashtra	022-39889000
Punjab	0172-3988900
Rajesthan	0141-3988900
Tamilnadu	044-39889000
Uttar Pradesh	0522-3988900
W Bengal	033-39889000
Bihar	1800 30099000
Chattisgarh	1800 30099000
Himachal Pradesh	1800 30099000
Jharkhand	1800 30099000
Orrisa	1800 30099000
Uttaranchal	1800 30099000
Assam-Guwahati	0361-2413138 / 2413158
Assam-Jorhat	0376-2309008
Jammu & Kashmir- Jammu	0191-2562258

Overseas-Middle East Asia

UNITED ARAB EMIRATES : M/s Al Futtaim Electronics,DUBAI .U.A.E.Tel : +971 4 6090760 Fax: +971 4 2832590,
OMAN : M/s Mohsin Haider Darwish, P.O.Box : 880, PC 112-RUWI, OMAN Tel :+968 24 703411 Fax :+968 24 798662
QATAR: M/s Videohome & Electronics Centre, PO Box : 4668,DOHA-QATAR,Tel : +974 4410060 Fax : +974 44373876
BAHRAIN: M/s Kewalram & Sons.PO Box : 84, Manama BAHRAIN Tel : +973 17 210617 Fax : 973 17 210627
KUWAIT: M/s Sefeena Gen Trading & Cont Est, P.O Box :5610, Safat: 13057 KUWAIT Tel :+9652456293 fax : +9652456297
KINGDOM OF SAUDI ARABIA:M/s Said Ahmed El-Ajou Trading Corp. LLC, Tel:+966 22830923, Fax :+966 2830924

Warranty Card for Onida washing machine

2. The warranty does not apply if

a) The washing machine has been damaged due to misuse, negligence, accident, improper installation, improper electrical circuit outside the machine, any defective electric supply, pests or any external agency.

b) The washing machine has been damaged due to use of sea water and/or sub standard detergent.

c) The washing machine is damaged in transit whether carried by the company's transport or by the purchaser himself.

d) The washing machine is tampered with, serviced or repaired by any agency not specifically authorised by the company.

e) The washing machine is not used in accordance with the instructions given in the USER GUIDE given along with this machine.

f) The serial number of the washing machine is deleted, defaced or altered.

g) The washing machine has been transported to another city without obtaining warranty transfer note from ONIDA.

h) The washing machine is purchased from any agency/dealer not authorised by Onida.

i) Accessories other than those supplied with this washing machine.

3. The company shall not be liable for any dealer expenses, if any, in carrying out the terms of this warranty.

4. The company shall not be liable for any delay in rectifying the washing machine, in the event of non-availability of parts or situations beyond the control of the company. The company will not be responsible for any losses direct or indirect in this regard.

5. This warranty is not applicable if the machine is put into any commercial use or used at places like hospitals, institutions, community halls, hostels and other similar applications.

6. Onida employees, dealer and service personnel have no authority to vary the terms of this warranty.

7. This warranty is issued subject to the jurisdiction of civil courts of Delhi.

WARRANTY

Customer Privileges.

Dear Customer,

Congratulations ! We wish you a long and happy association with your Onida Washing Machine. We would like you to know your privileges with respect to your washing machine.

You are entitled to :

1. a) Repair or replacement of any parts other than rubber and plastic parts free of charge, for a period of 24 months from the date of invoice/bill.
   b) The defective part(s) shall be replaced with a functionally working equivalent part(s). The removed part(s) will be Onida property.
2. After sales service is available with in the municipal limits of the city where the service station/authorised dealer is located.
3. These privileges are available to the original purchaser only.
4. In the event the washing machine requires attention at the company's service centre/authorised dealer under an advice of company's service engineer, the purchaser should arrange to deliver the washing machine to the service centre at his cost. The company shall arrange to transport the washing machine to the purchaser free of cost, after service.

ONIDA warrantees your above privileges.

Kindly note

1. Your privileges mentioned above, are for the repair and replacement of the defective parts only and does not cover any consequential damages or loss or replacement of the washing machine itself or refund of the price.

WARRANTY CARD

Machine Sl. No.: _____

Model : _____

Dealer's Name : _____

Address : _____

Date of Purchase : _____

Date of Expiry : _____

Stamp of Dealer

* CONDITIONS APPLY AS DESCRIBED IN MANUAL

ONIDA

DESIGNED WITH YOU IN MIND

MANUFACTURED & MARKETED BY :
MIRC ELECTRONICS LIMITED
ONIDA HOUSE, G-1, MIDC, MAHAKALI CAVES ROAD,
ANDHERI (EAST), MUMBAI 400 093
MADE IN INDIA
www.onida.com